



DOLBY DIGITAL®



Dolby Digital® T70-Premium

Charging:

Ensure the transmitter is charged using the supplied power adapter

Playback:

- Connect the transmitter to your audio source via the 3.5 mm stereo input (this can be done using the included jack or RCA tulip cable)
- Turn on the transmitter by selecting either Low (100 meters range) or High (300 meters range)
- Change the transmitter's channel using the button on the back



dolby-digital.com