



DOLLY DIGITAL

MANUAL:

Connecting

# 2 Headmounted Microphones to 1 Transmitter



Requirements:



2 x Headphones  
Dolly Digital® type RD-Pro-M

or



2 x Headphones  
Dolly Digital® type FD-Pro-M



+



1 x Transmitter  
type Dolly Digital®  
T80Pro-Bluetooth  
+ splitter cable

## STEP 1:

### Pairing the first microphone with the first receiver



1. Connect the supplied splitter cable to the T80Pro-Bluetooth transmitter by plugging it into the MIC input on the front of the transmitter.



2. Connect one receiver to one of the splitter cable inputs.



3. Switch on the microphone using the side switch and press the **+** and **-** buttons simultaneously for 5 seconds until the blue LED starts flashing.




4. Now switch on the receiver using the side switch.

**Congratulations!** The first microphone is now paired with the first receiver. Next, we will pair the second microphone to the second receiver.

## STEP 2:

### Pairing the second microphone with the second receiver

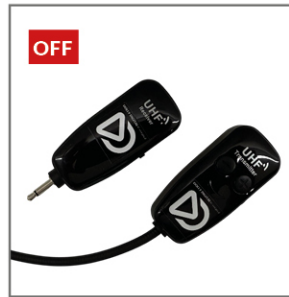

1. Temporarily switch off the first microphone and receiver you paired earlier.



2. Connect receiver 2 to the second input of the supplied splitter cable.



3. Switch on the second microphone using the side switch and press the **+** and **-** buttons simultaneously for 5 seconds until the blue LED starts flashing.



4. Now switch on the second receiver using the side switch.

**Congratulations!** Both microphones are now paired. You can switch the first microphone and receiver back on and use both microphones simultaneously.